

# EURO TOWERS LTD

MANUFACTURERS OF ALUMINIUM ACCESS EQUIPMENT

MANUFACTURED TO A TUV CERTIFIED ISO 9001 QUALITY CONTROL SYSTEM

## MICROFOLD 1000 UNIT

### Assembly Instructions

Ensure all parts are present and are not damaged before assembling

COMPRISING OF...

- 4 x K548 - Castors with adaptors
- 1 x MFBU - Microfold base unit
- 1 x MCPP - Microfold platform
- 1 x MFGF/R - Red g/rail frame
- 1 x MFGF/G - Green g/rail frame

#### PLATFORM LEVEL 1: 0.25M

1. Place the unit in position, open the green gate braces and square the unit.
2. Fit the platform on the bottom rung.
3. Place unit in work position and lock all castors.
4. Enter platform, close the green gate braces in their locations ensuring that the brace hooks are fully engaged.

#### PLATFORM LEVEL 2: 0.5M

1. Unfold the unit, open the green gate braces and square the unit.
2. Fit the platform on the 2<sup>nd</sup> rung.
3. Place unit in work position and lock all castors.
4. Enter platform, close green gate braces in their locations ensuring that the brace hooks are fully engaged.

#### PLATFORM LEVEL 3: 0.75M

1. Unfold the unit, open the green gate braces and square the unit.
2. Fit platform on the third rung
3. Place unit in work position and lock in castors.
4. Raise guardrail to the next pin hole 1m above the platform and engage the long pin clips.
5. Enter platform, close green gate braces in their locations ensuring that the brace hooks are fully engaged.

#### PLATFORM LEVEL 4: 1.0M

1. Unfold the unit, open the green gate braces and square the unit.
2. Fit the platform on the fourth rung.
3. Place unit in the work position and lock all castors. Raise guardrail to the next pin hole 1m above the platform and engage long pin clips.
5. Enter platform, close the green gate braces in their locations ensuring that the brace hooks are fully engaged.



### GENERAL SAFETY RULES

1. Do not use if the product is damaged or has parts missing
2. Do not use on unstable ground such as loose bricks, boxes or blocks
3. Before use ensure that the castors are fully fitted to the folding frame, tighten if necessary.
4. Remove all personnel and materials before moving the unit.
5. When moving the unit, apply force manually by pushing at the base.
6. Do not over reach and do not move the unit by pulling yourself along whilst on the platform.
7. Do not gain extra height by using boxes, ladders etc on the platform.
8. Access to the unit is only through the green gates, never through the red gates.
9. Ensure that the locking hooks on gates are functioning correctly and are fully engaged.
10. Ensure that the castors are locked before use.
11. Ensure that the long pin clips are properly fitted.
12. If there is an overhead hazard use head protection
13. Never gain entrance to the platform by climbing over the outside of the unit.
14. Do not over load the unit
15. Do not overreach out of the unit

MAXIMUM SAFE WORKING LOAD FOR PLATFORM / STRUCTURE: **250KG**